




A Holley Performance Brand

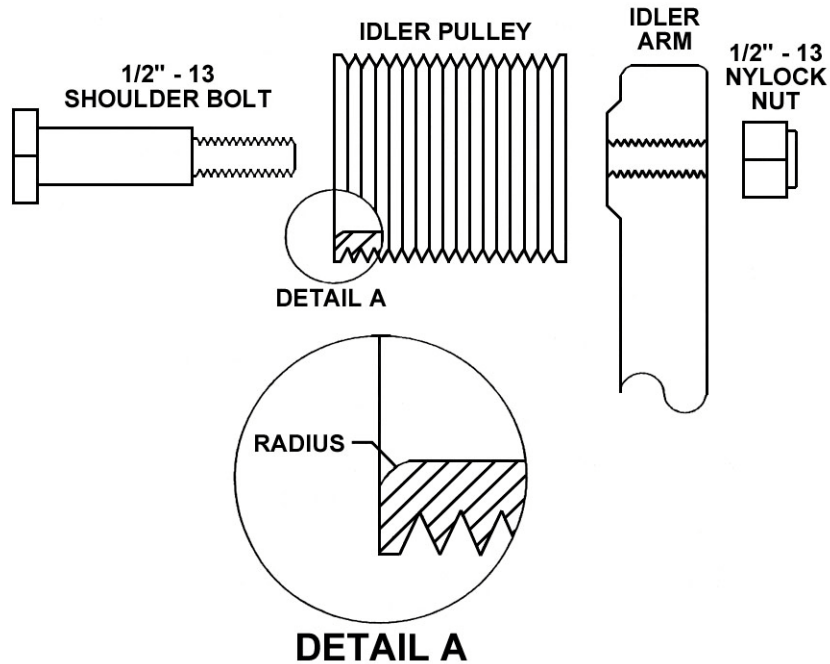

256 IDLER PULLEY INSTALLATION:

1. Bolt idler pulley (with radius toward front) to the idler arm with the 1/2" – 13 shoulder bolt. Torque to 45 ft./lbs.
2. Install the 1/2" – 13 Nylock nut to the back side of the idler arm. Torque to 45 ft./lbs.

**Holley Performance Products
P.O. Box 10360
Bowling Green, KY 42102-7360**

**Technical Support: 1-270-781-9741
Fax: 1-270-781-9772**

For online help, please refer to the Tech Service section of our website: www.holley.com

W523

Date: 6-6-02